

YAESU
The radio

FT-70DR/DE

Main Firmware Update Instruction Manual

YAESU MUSEN CO., LTD.

Introduction

This application is a software tool for updating the firmware of transceivers manufactured by Yaesu Musen Co., Ltd. Currently there are two different destination versions of the FT-70DR: USA and EXP (including AUS, EU and CHN). You must check which version radio you have and use the correct update software. The destination is marked on the box serial number label.

- DST: USA version covers North and South America [FT-70D_verXXX(USA)]
- DST: EXP/AUS/EU/CHN covers all other countries [FT-70D_verXXX(EXP)]

CAUTION!

*Be sure to confirm the model and the version of your transceiver before starting the update.
Writing incorrect firmware to the transceiver may cause abnormal operation or failure.*

Important Notes

- All responsibility for the use of this software lies with the customer. Yaesu cannot be held responsible in any way for any damages or losses, which may be incurred by the customer as a result of using this software.
- Copyrights and all other intellectual property rights for the software, as well as the software manual, are the property of YAESU MUSEN CO., LTD.
- Revision, modification, reverse engineering, and decompiling of this software is prohibited. Redistribution, transfer, and resale of downloaded files are also prohibited.
- Downloaded files may only be used for personal use.
- If you cannot perform the firmware upgrade yourself, please consult with one of our sales sites or service centers.

Trademarks

Microsoft®, Windows®, Windows® 8.1, Windows® 10, and Windows® 11 are registered trademarks in the United States and other countries.

System Requirements (Operating Environment)

In order to use this program, a personal computer (PC) with one of the following Windows operating systems, and a supplied USB cable are required.

Supported Operating Systems

One of the following operating system environments:

- Microsoft® Windows® 11
- Microsoft® Windows® 10
- Microsoft® Windows® 8.1

CPU

The performance of the CPU must satisfy the operating system requirements.

RAM (System Memory)

The capacity of the RAM (system memory) must be more than sufficient to satisfy the operating system requirements.

HDD (Hard Disk Drive)

The capacity of the HDD must be more than sufficient to satisfy the operating system requirements.

In addition to the memory space required to run the operating system, about 50 MB or more of additional memory space is required to run the program.

Necessary PC peripheral interfaces

USB interface (USB Port)

Overview of Firmware Update

Update the firmware by following the procedures below:

**(1) Preparing Microsoft .NET Framework 3.5
Service Pack 1 (page 4)**



**(2) Install a USB driver and Microsoft Visual C++
2008 Redistributable (page 6)**




(3) Update the firmware (page 15)

(1) Preparing Microsoft .NET Framework 3.5 Service Pack 1

For the FT-70DR/DE firmware update, Microsoft .NET Framework 3.5 Service Pack 1 is required. According to the Windows version you use, follow the procedure below.


- * The following procedure must be performed only when using firmware update tool for the first time. When Microsoft .NET Framework 3.5 Service Pack 1 is already installed on your computer, skip the following procedure.
 - * Operations on a Windows 10 computer are shown in the procedure below for the purpose of explanation.
1. In the web browser, open <http://www.microsoft.com/en-US/download/details.aspx?id=22> and click the **[Download]** button and then follow the on-screen instructions to download “dotnetfx-35setup.exe”.
 2. Execute the downloaded “dotnetfx35setup.exe”.
 - * If the “**User Account Control**” screen appears, click the **[Yes]** button.

“**An app on your PC needs the following Windows feature:**” appears on the “Windows Features” screen.
 3. Click **[Download and install this feature]**.

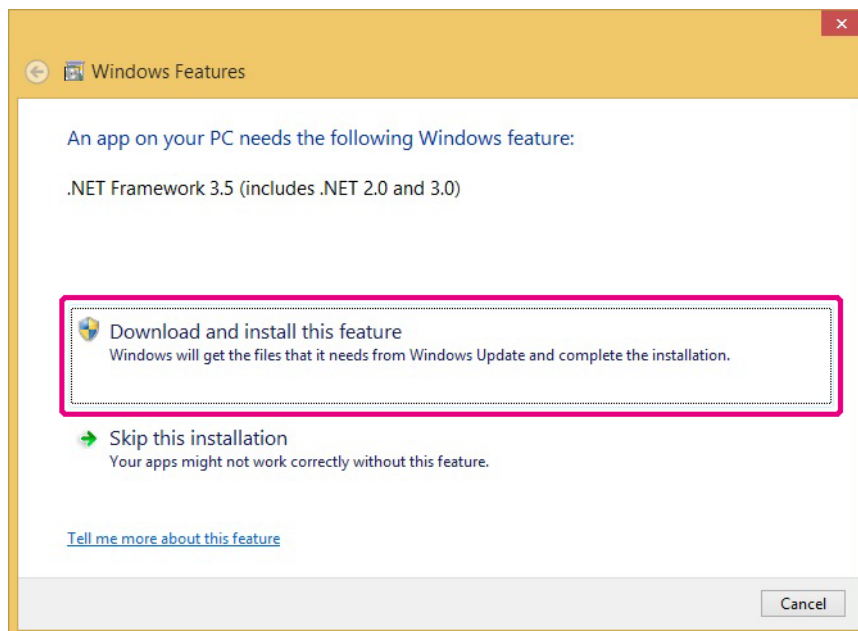

Necessary files will be downloaded and Microsoft .NET Framework 3.5 Service Pack 1 will be installed. When the installation completes, “The following feature was successfully installed:” appears on the “Windows Features” screen.

4. Click the **[Close]** button.

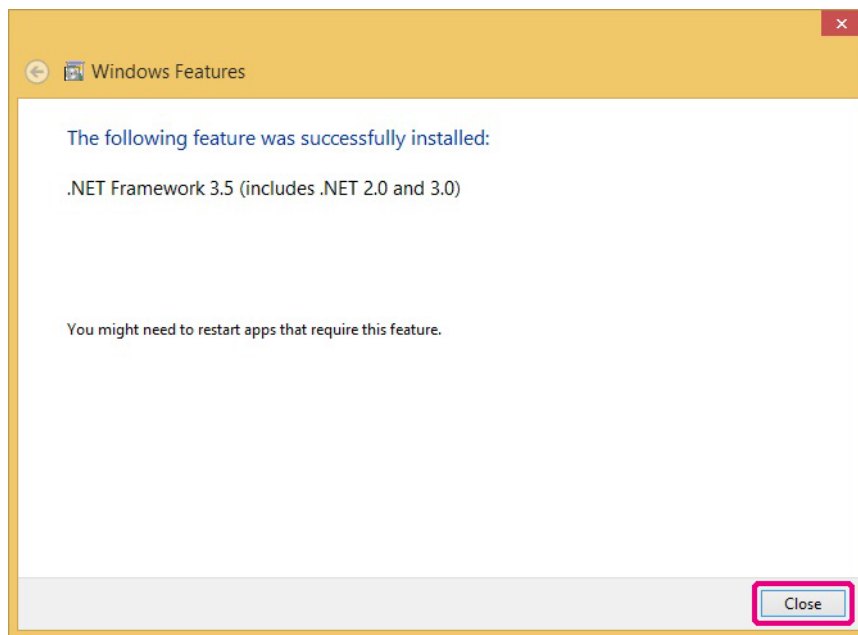

(2) Installing a USB Driver and Microsoft Visual C++ 2008 Redistributable


Start the “YAESU Firmware Update Program” to install a USB driver.

After the USB driver installation completes, install “Microsoft Visual C++ 2008 Redistributable”.

* The following procedure must be performed only when using installation application for the first time.
When the USB driver is already installed on your computer, skip the following procedure.

1. Extract the downloaded zip file.
The destination folder opens automatically.
2. Double-click “FT-70D_verXXX(***).exe” (YAESU icon).


* “XXX” refers to the version number.

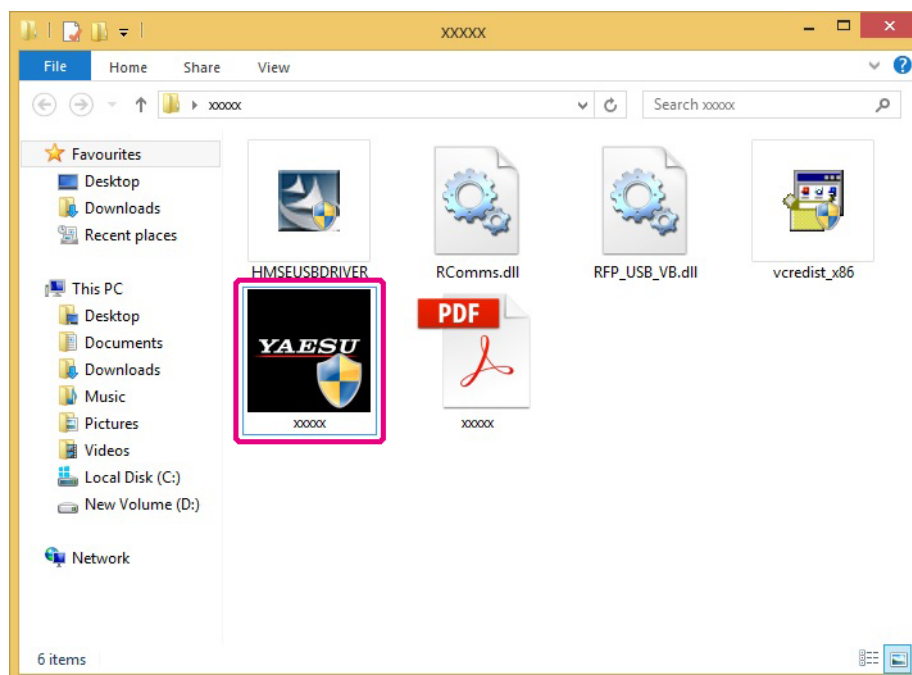

* If the “User Account Control” screen appears, click the [Yes] button.


The “YAESU Firmware Update Program” will start.

3. Click the [USB Driver Install] button.

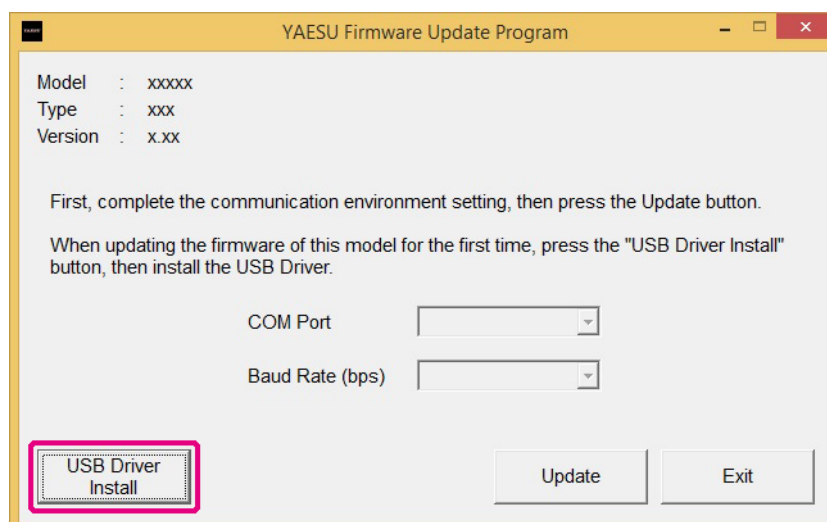


The “Driver Install” screen appears.

4. Click the **[Install]** button.

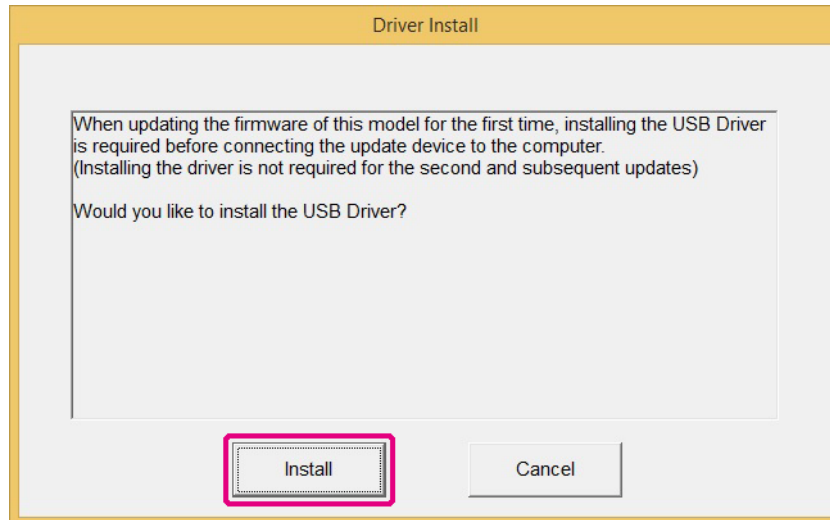


* If the “Windows Security” screen appears, click the **[Install]** button.

The USB driver will be installed, and the “USB Drive Loading...” display will blink on the “Driver Install” screen.

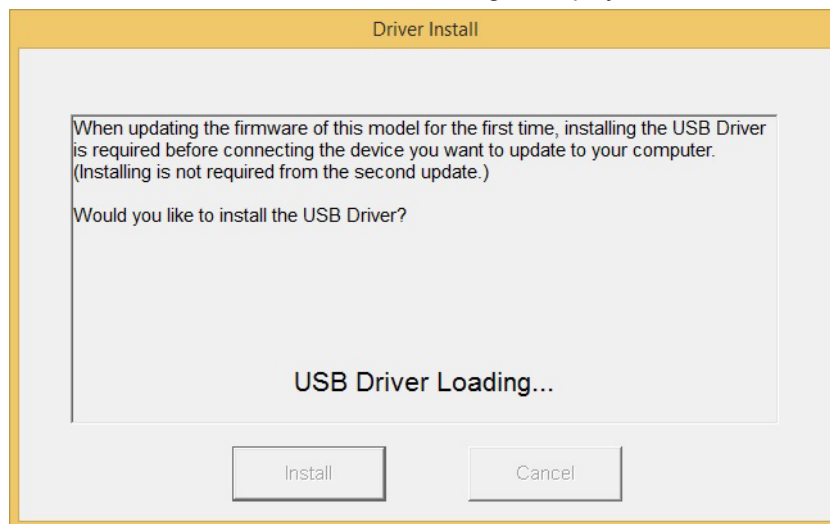


After a while, the “Microsoft Visual C++ 2008 Redistributable Setup” screen appears.

5. Click the **[Next]** button.

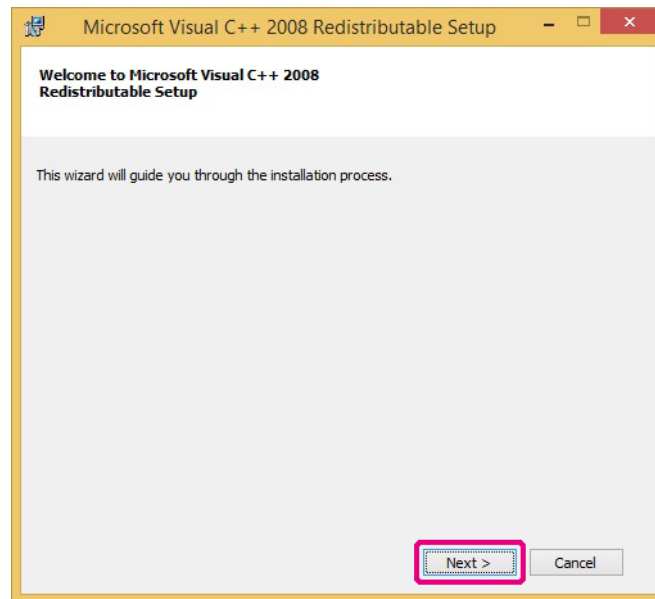


“License Terms” appears.

6. Check the **[I have read and accept the license terms.]** checkbox and click the **[Install]** button.

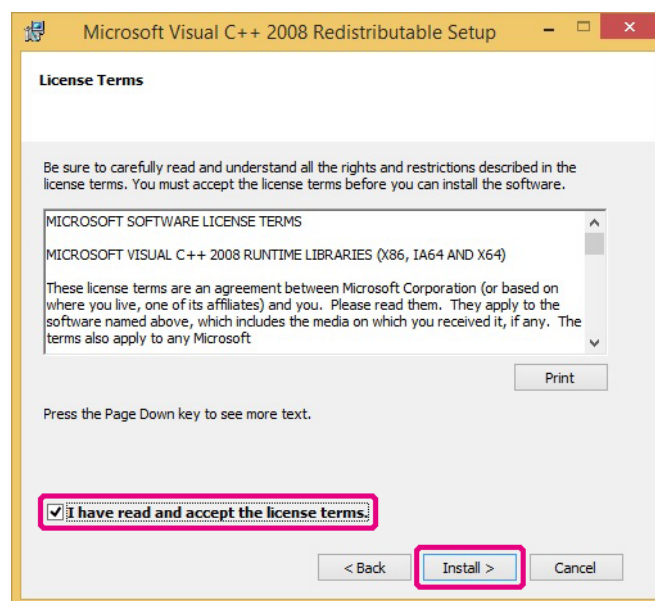


Microsoft Visual C++ 2008 Redistributable will be installed. When the installation completes, “Setup Complete” appears on the “Microsoft Visual C++ 2008 Redistributable Setup” screen.

7. Click the **[Finish]** button.

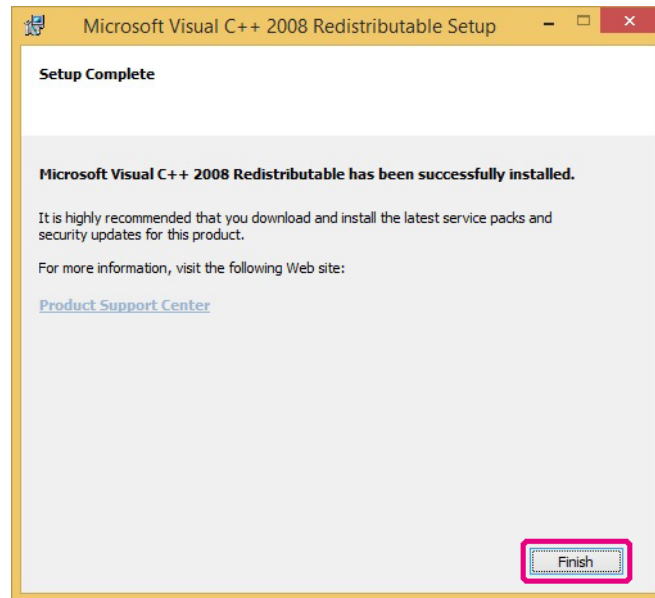

Returns to the “Driver Install” screen of the YAESU Firmware Update Program.

8. Click the **[Next]** button.

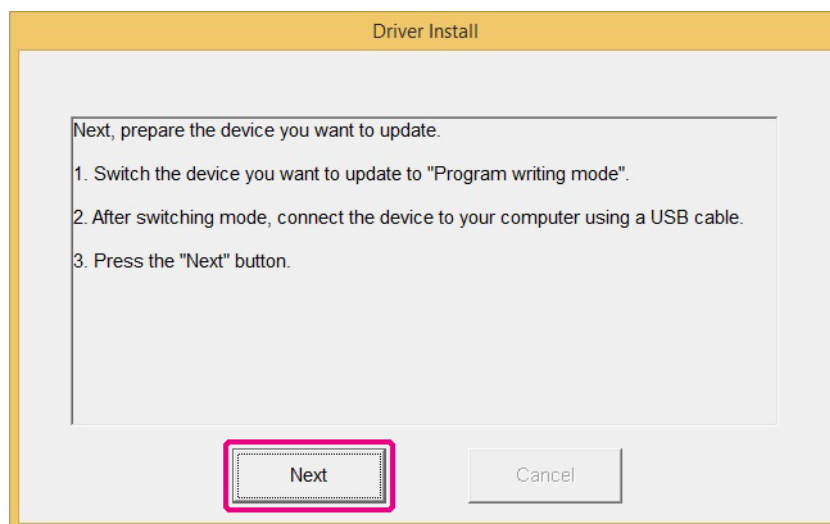


Returns to the “YAESU Firmware Update Program” screen.


Checking and updating the USB driver

1. When the power of FT-70DR/DE is on, press and hold **POWER (LOCK)** switch to turn it **OFF**.
2. Remove the battery pack and the AC adaptor from the transceiver.
3. Move the three-position program switch of the FT-70DR/DE upward to the program-writing mode, and then connect the FT-70DR/DE to the PC with the supplied USB cable.
4. To access the programming switch, carefully lift the EXT DC IN jack and DATA terminal cover. The three-position program switch is located through the right side case, directly behind the DATA terminal.

Note: The driver will not be displayed in the device manager if the FT-70DR/DE and PC are not connected by the supplied cable.

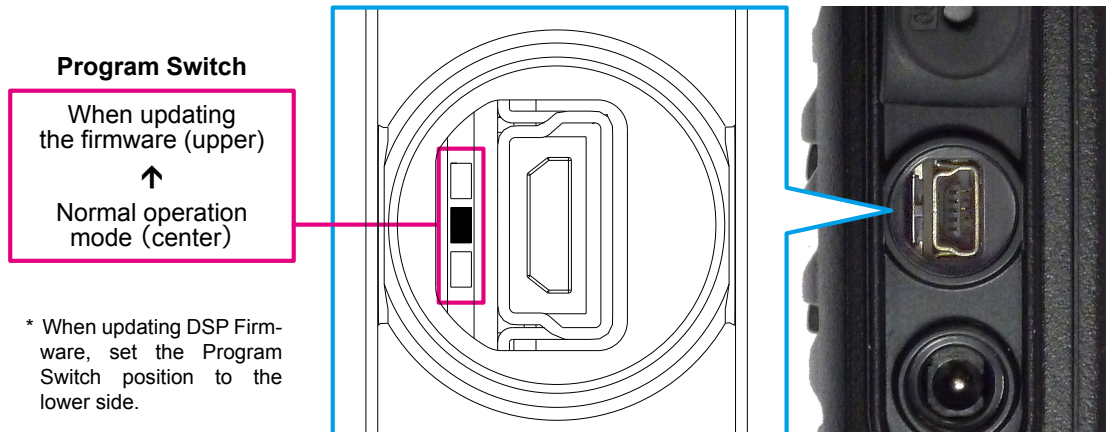


5. Connect the AC adaptor to a wall outlet and then insert the connector to the FT-70DR/DE EXT DC IN jack.
6. Open the computer Device Manager.
To verify that the driver has been successfully installed on the computer, confirm “**Generic Boot USB Direct**” appears under “**Renesas USB Development Tools**” in the computer Device Manager listing.

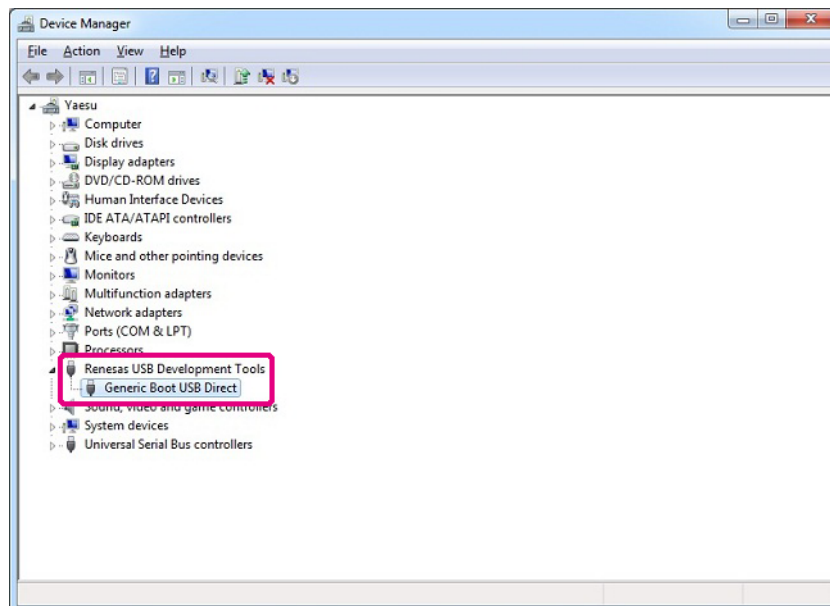


IMPORTANT NOTICE!

- When “**Renesas USB1653 USB Boot Mode Device**” appears under the Universal Serial Bus controllers, as shown in the Device Manager below, the PC will incorrectly recognize the driver.
- Refer to the instructions “**Driver update method**”, to update the correct driver “Generic Boot USB Direct”.

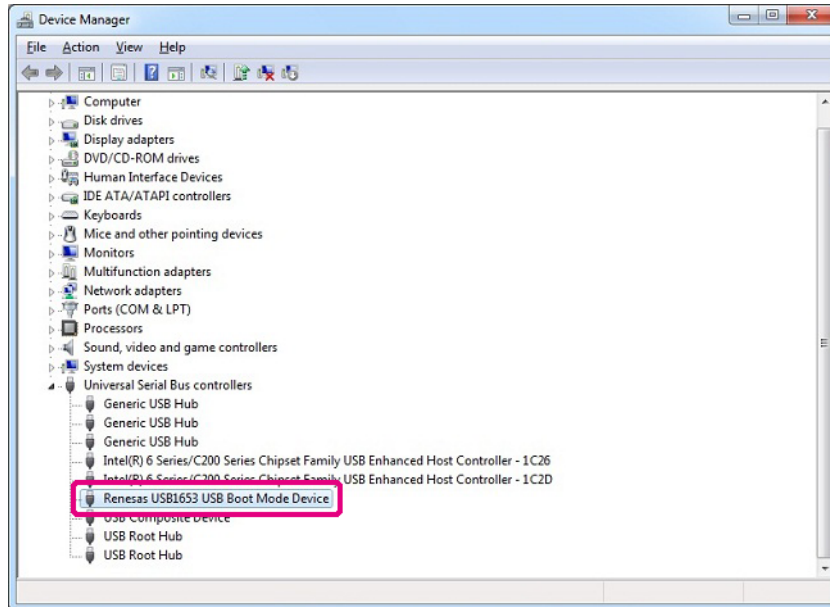


Driver update method


- Open the device manager of the PC, select “**Renesas USB1653 USB Boot Mode Device**” under the Universal Serial Bus controllers, and right-click the mouse to display the screen shown below. Click “**Update Driver Software**” in the popup window.

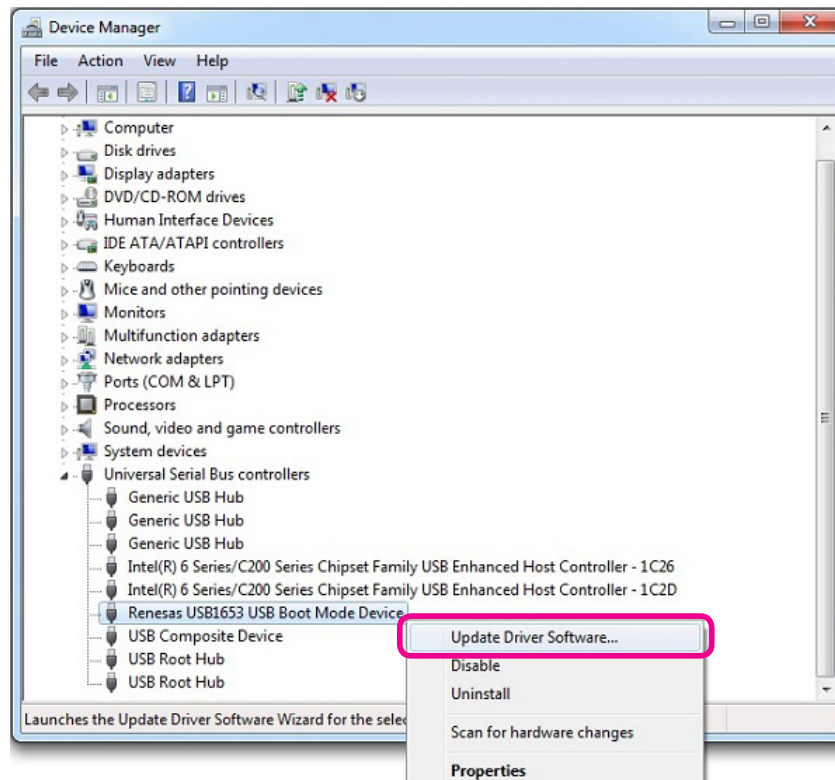


2. Click **"Browse my computer for driver software"**.

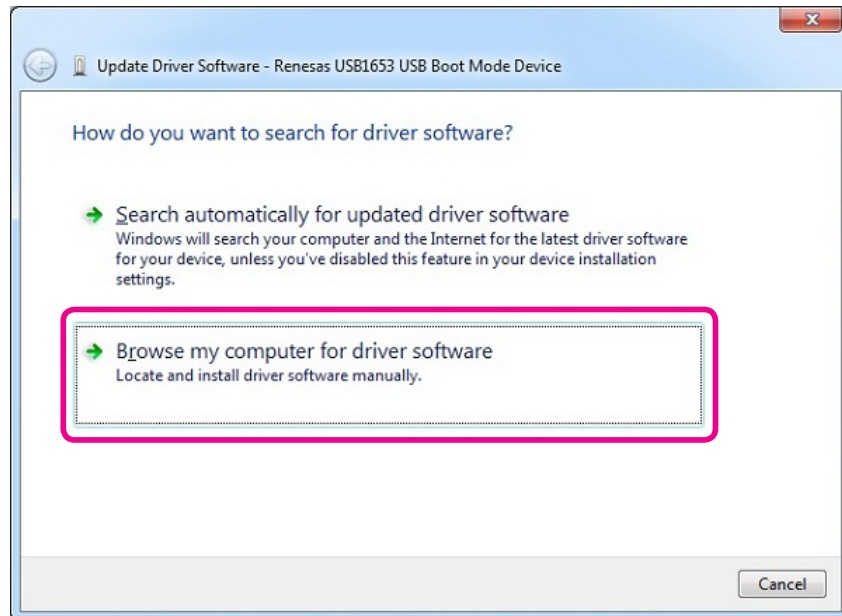


3. Click **"Let me pick from a list of device drivers on my computer"**.

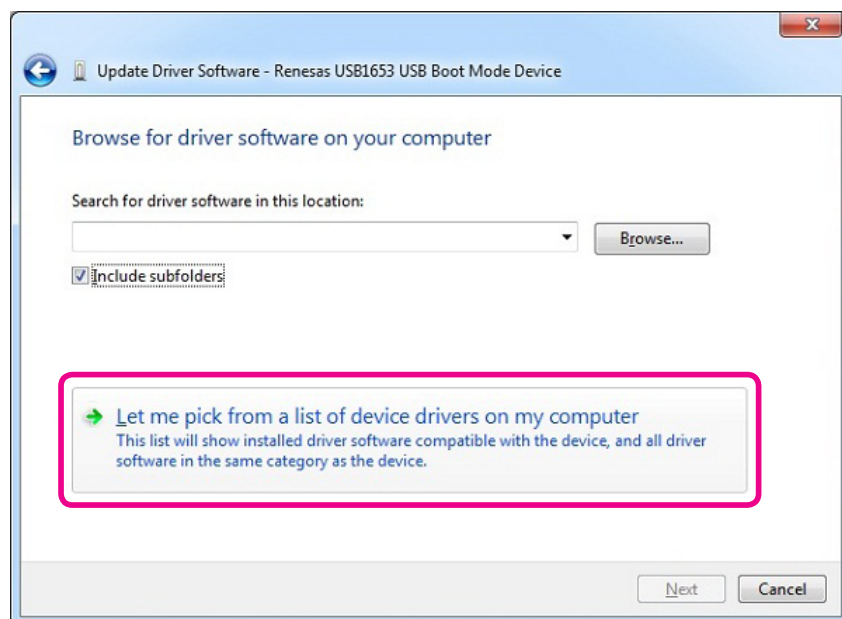


4. Check “**Show compatible hardware**”, select “**Generic Boot USB Direct**” inside the model selection box, and then click “**Next**” button, as shown in the screen displayed below.

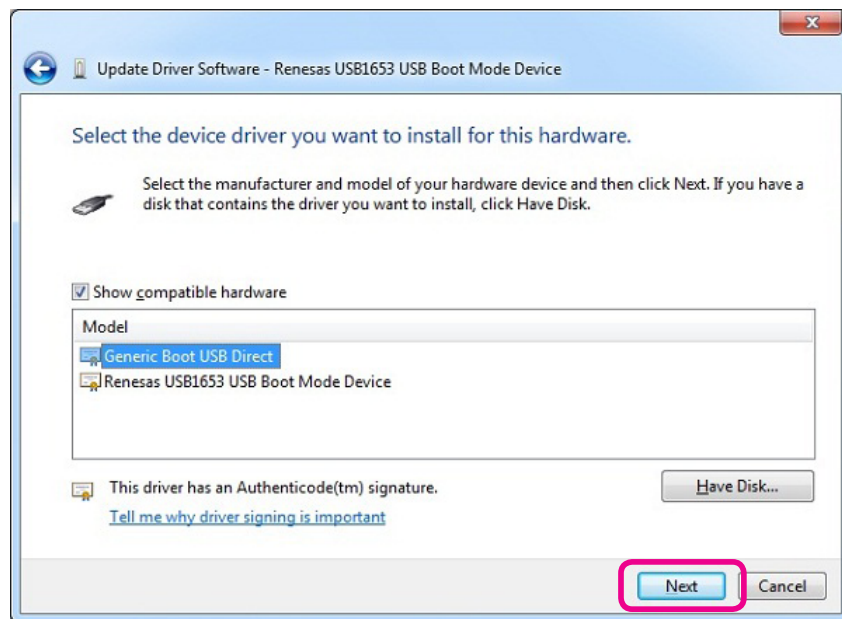

5. Click “**Close**” button when the below illustrated screen is displayed.

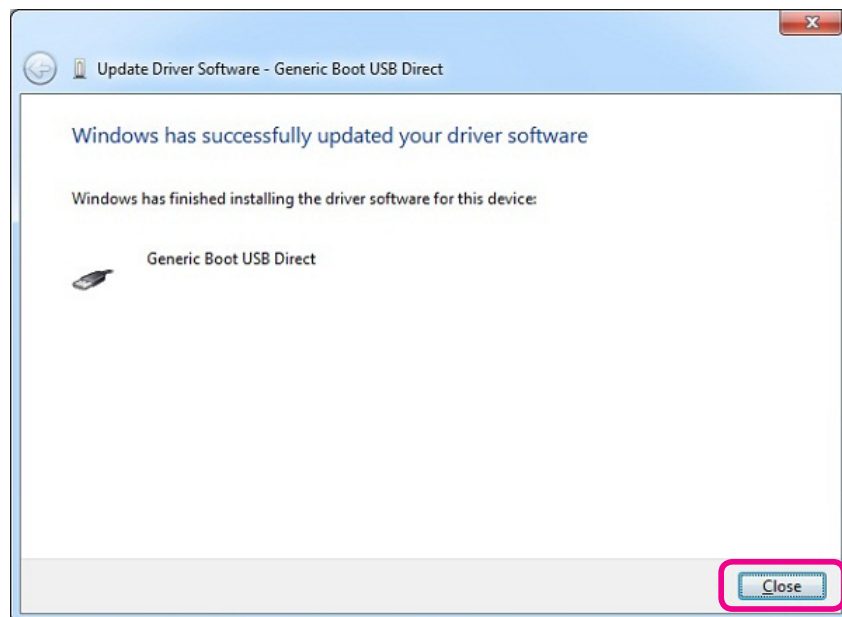

6. Open the device manager of the PC and verify that “**Generic Boot USB Direct**” is displayed under the “**Renesas USB Development Tools**” as illustrated below; the driver update has been completed successfully.

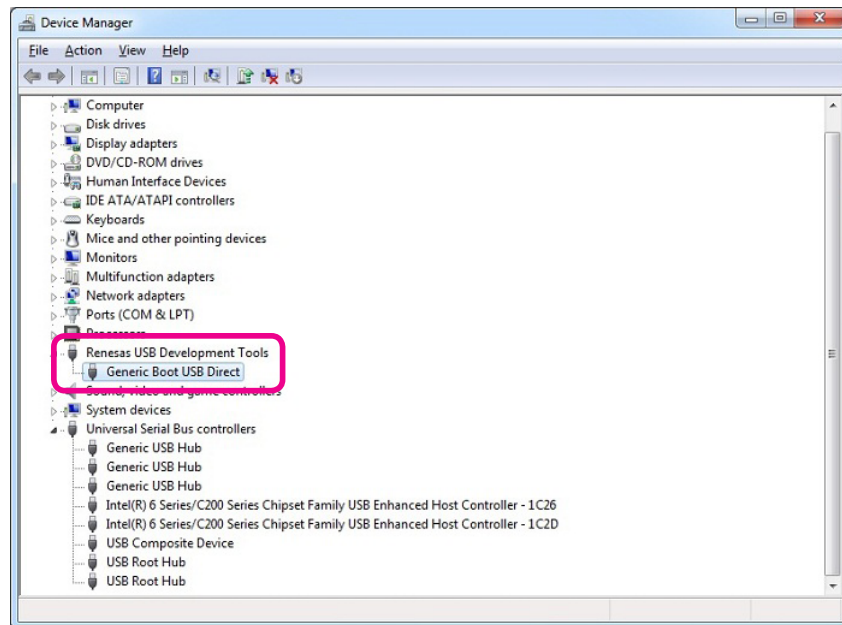

7. The driver update procedure ends with this.
Follow the “(3) Updating the Firmware” (page 15) procedure from step 3 to update the firmware.


(3) Updating the Firmware

Execute the FT-70DR/DE firmware update.

Caution


After updating the firmware, reset-all will be executed for FT-70DR/DE, which will delete all saved data. Back up your registered data write it down.

1. Extract the downloaded zip file.
The destination folder opens automatically.
2. Double-click “FT-70D_verXXX(XXX).exe” (YAESU icon).
* “XXX” refers to the version number.

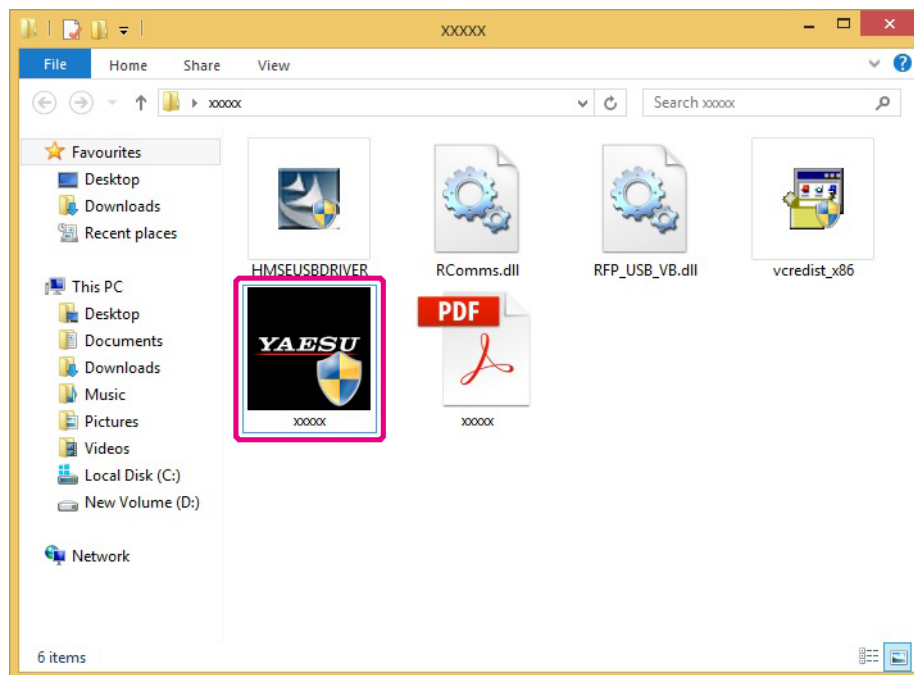


- * If the “User Account Control” screen appears, click the [Yes] button.
The “YAESU Firmware Update Program” will start.

3. Click the **[Update]** button.

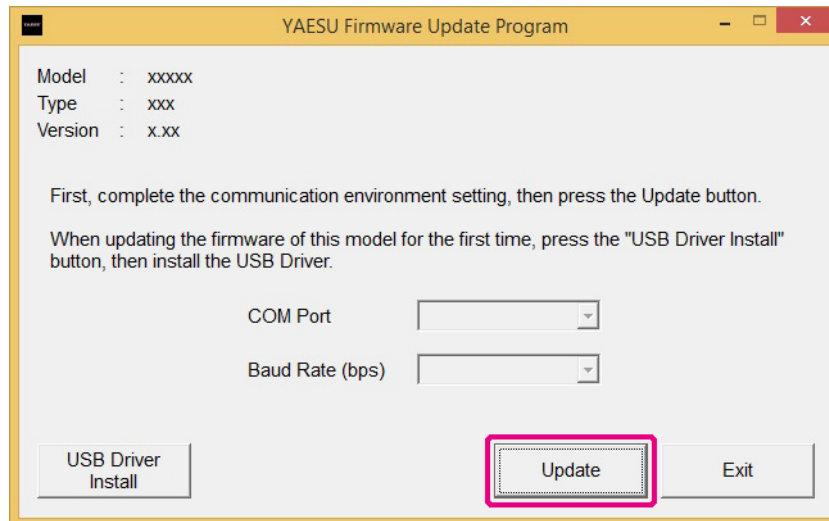

The update preparation procedure appears. Make FT-70DR/DE ready for the update.

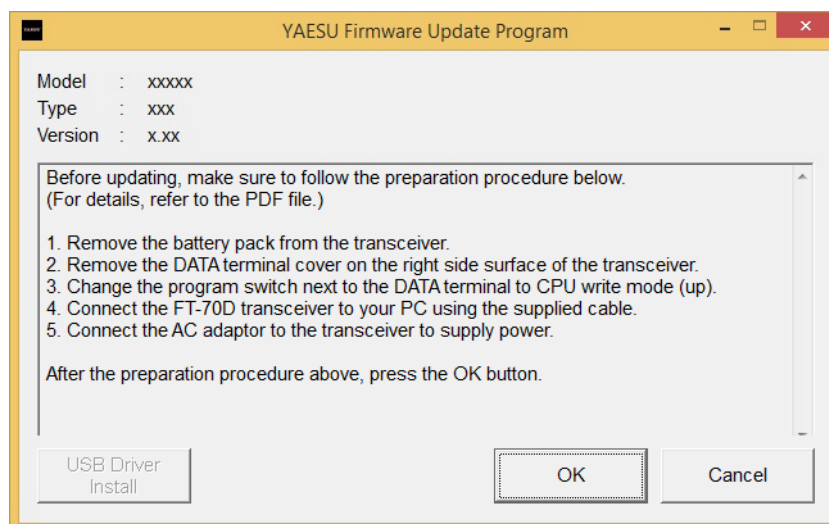

4. When the power of FT-70DR/DE is on, press and hold **POWER (LOCK)** switch to turn it **OFF**.
5. Remove the battery pack and the AC adaptor from the transceiver.

6. Follow the caution below and use a pointed object such as a pin to change the position of the program switch provided on the left side of the DATA terminal located on the right-side surface of the transceiver.

Caution

When updating the firmware, change the program switch position to the upper side.



Program Switch

When updating the firmware (upper)



Normal operation mode (center)

* When updating DSP Firmware, set the Program Switch position to the lower side.

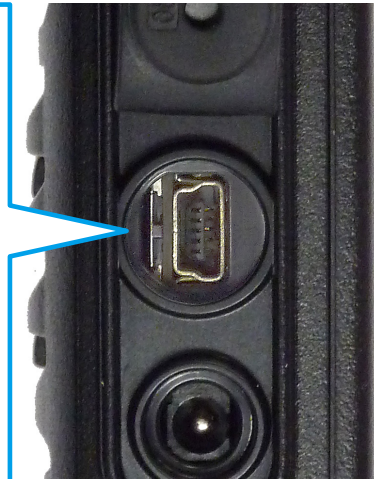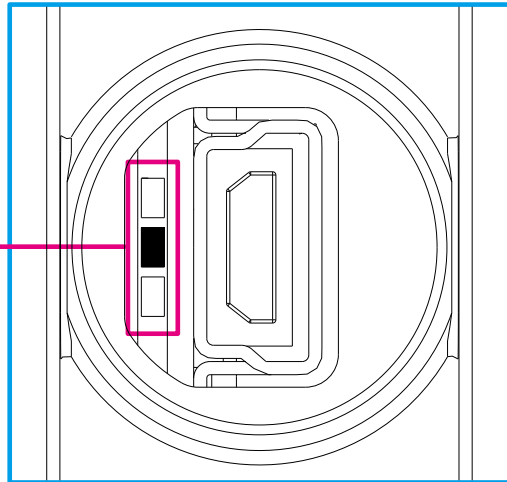


7. Use the supplied cable to connect the FT-70DR/DE DATA terminal to the computer.



8. Connect the AC adapter to a wall outlet and then insert the connector to the FT-70DR/DE EXT DC IN jack.




9. On the YAESU Firmware Update Program screen, press [OK].

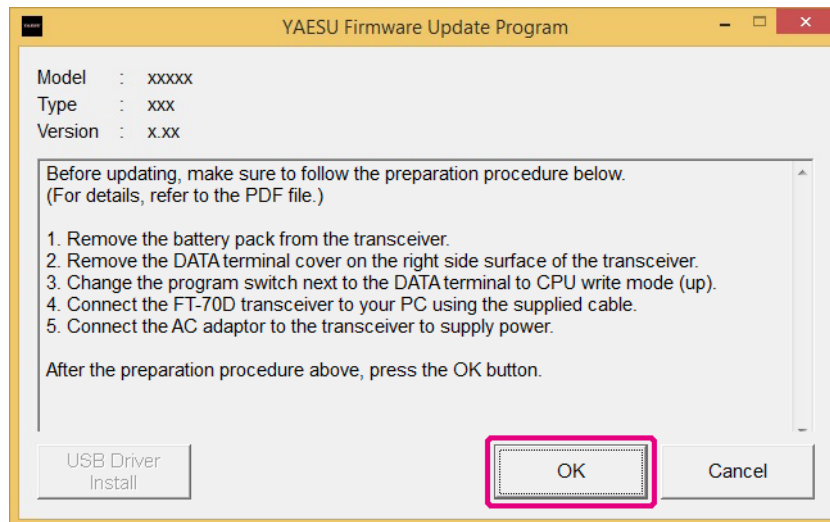


The "Select USB Device" screen appears.

10. Click the [OK] button.

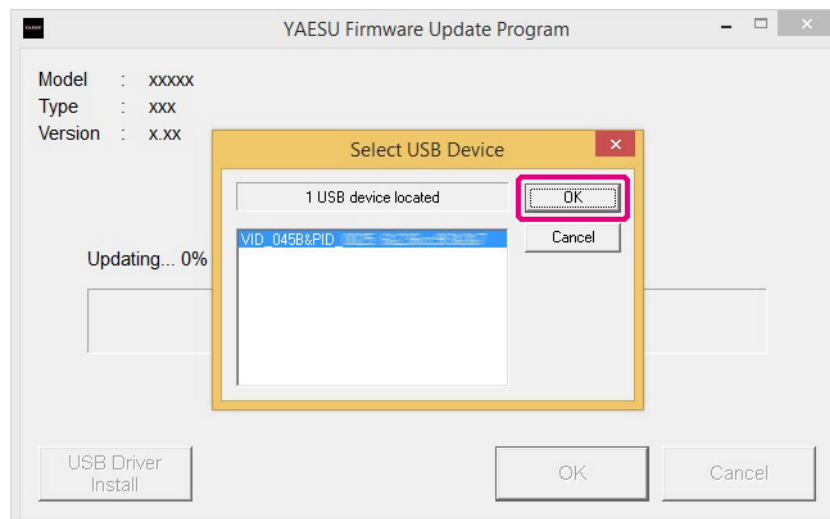


The firmware transfer starts and the FT-70DR/DE firmware update executes (it takes about 20 seconds to complete the update). When the firmware update completes, a message appears.

11. Click the **[OK]** button.

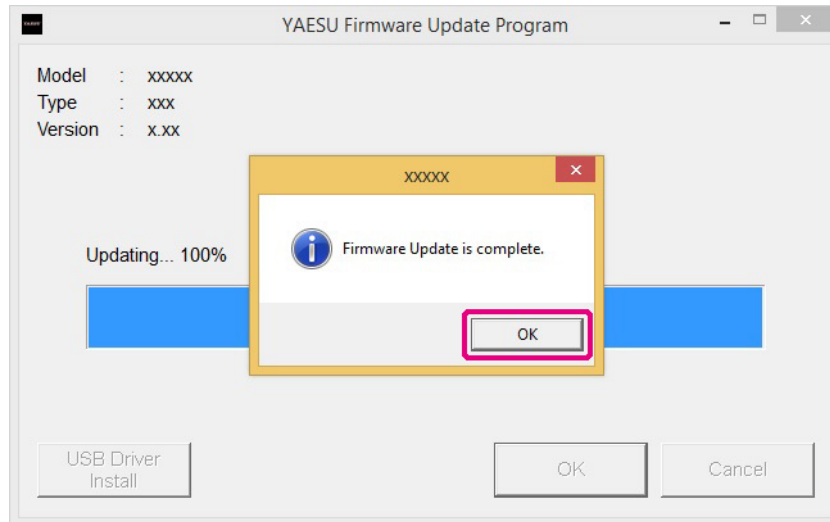


The post-update procedure appears. Perform the post-update procedure.

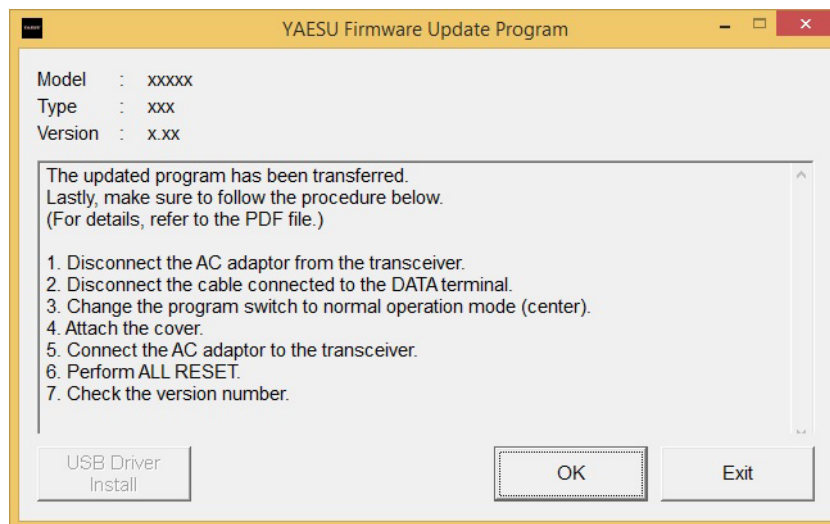


12. Remove the AC adaptor from the transceiver.
13. Remove the USB cable from the DATA terminal and the computer.

14. Use a pointed object such as a pin to change the program switch position to “**normal operation mode (center)**”.

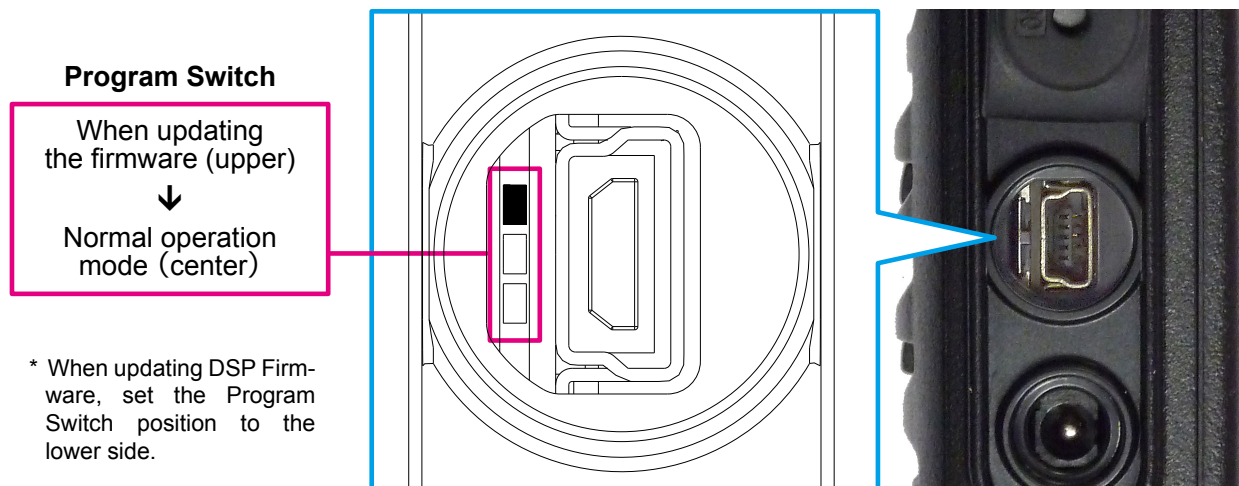


15. Connect the AC adapter connector to the FT-70DR/DE EXT DC IN jack.
16. Perform all-reset. Press and hold **POWER (LOCK)** switch to turn the power OFF.
17. While pressing down **[MODE]**, **[HM/RV]**, and **[AMS]** key together, press and hold **POWER (LOCK)** switch.
The transceiver turns on and you will hear a beep sound.
18. After you hear a beep sound, release the keys.
“ALL RESET PUSH F KEY” appears on the display.
19. Press **[F]** key.
You will hear a beep sound and the call sign input guidance screen appears.
20. Input the call sign with ten key or DIAL knob.
21. Press **PTT** switch.
The call sign sets and the frequency screen appears.
22. Check the firmware version. Press and hold **[F]** key.
The transceiver mode switches to Set Mode.
23. Rotate **DIAL** knob to select Set Mode **[59 VER.INF]**, then press **[F]** key.
The firmware versions appear.
Rotate DIAL knob to select firmware.
C x.xx : Firmware Version
D x.xx : DSP Firmware Version
24. Check the firmware version and press **PTT** switch.
25. Click the **[OK]** button on the “YAESU Firmware Update Program” screen.

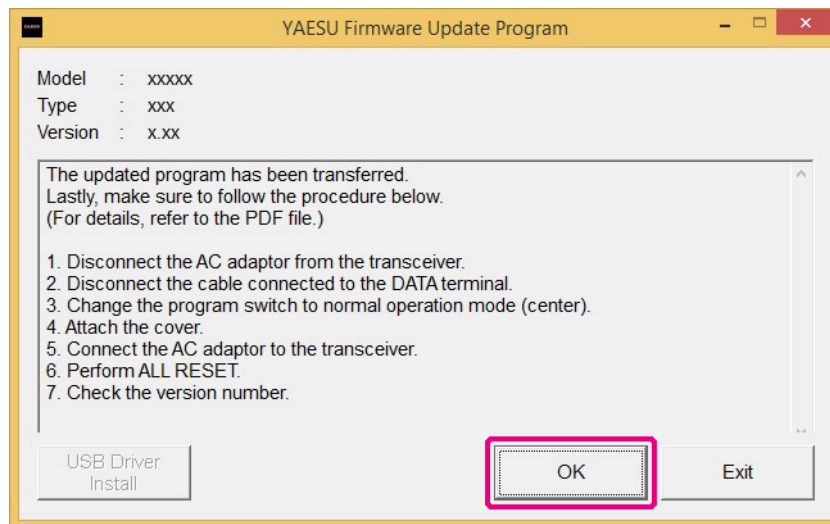

Returns to the YAESU Firmware Update Program startup screen.

26. Click the **[Remove]** button.

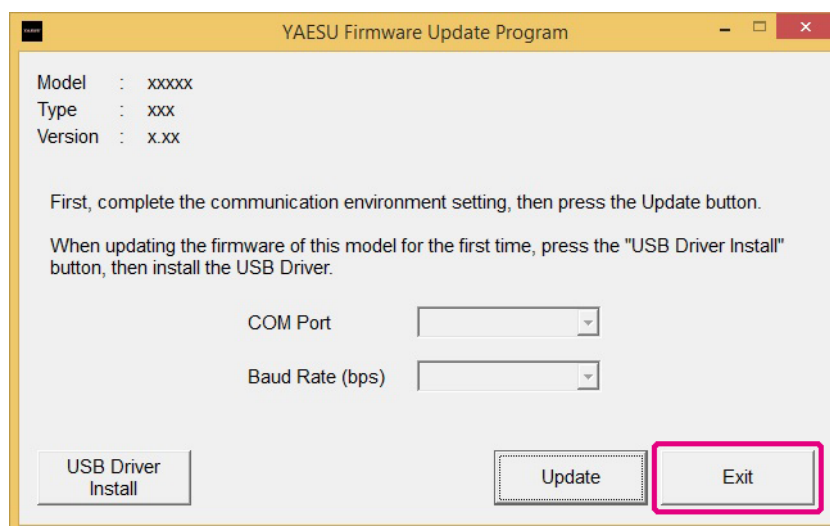

The YAESU Firmware Update Program finishes.

Uninstalling the YAESU Firmware Update Program

Delete the folder containing the extracted update program.

- * Since the program has not written to the registry or system folder, the program can be uninstalled simply by deleting the folder.



Copyright 2022

YAESU MUSEN CO., LTD.

All rights reserved.

No portion of this manual may be
reproduced without the permission of
YAESU MUSEN CO., LTD.

YAESU MUSEN CO., LTD.

Tennozu Parkside Building

2-5-8 Higashi-Shinagawa, Shinagawa-ku, Tokyo 140-0002 Japan

YAESU USA

6125 Phyllis Drive, Cypress, CA 90630, U.S.A.

YAESU UK

Unit 12, Sun Valley Business Park, Winnall Close

Winchester, Hampshire, SO23 0LB, U.K.